



MULTI-PARAMETER - MULTI-GAS MASS FLOW METER



Design Features

- Multi-Parameter functionality: Mass Flow, Volumetric Flow, Gas Pressure and Temperature.
- Multi-Gas functionality: support for 90 different gases and gas mixes.
- "User Defined Mixture" functionality allows to create and store up 20 custom gas mixes with up to 5 different gases each.
- Quick (< 20ms) response time.</p>
- Standard accuracy ± (0.5% RD + 0.2% FS).
- 200 to 1 turndown ratio.
- Two programmable mass flow rate totalizers.
- High, Low or In Range Alarms with preset action delay for Mass Flow, Temperature and Pressure.
- User programmable mass flow rate Pulse Output (via SSR).
- Extensive Self Diagnostics with status LED or OLED indication.
- All 3 user selectable analog output interfaces are standard: 0-5Vdc, 0-10Vdc, 4-20mA.
- Two user selectable digital communication interfaces (RS-232 and RS-485) are standard.
- Optional Modbus RTU network interface with isolated RS485 transceiver.
- User programmable solid state relay with latch option.
- Universal 9-26 Vdc power supply input.
- Local high contrast OLED (optional) graphic display with joystick control.
- Free, easy-to-use configuration and calibration software (RS-232/RS-485).

General Description

Aalborg Instruments' DPM series digital multi-parameter mass flow meter provides accurate measurements of mass flow rate, volumetric flow rate, pressure and temperature of process gases. It can be used in a variety of industries: scientific and analytical applications, bioreactors and surface depositions, gas sampling, manufacturing and metrology activities.

DPM series digital mass flow meters incorporate multi-parameter multi-gas functionality which allows users on site to select up to 30 different gases locally via optional OLED/Joystick interface, remotely via the RS232/RS485 interface or optional Modbus RTU interface. Standard acuracy is +/- (0.5% RDG + 0.2% FS). Turn down ratio is 200:1. Response time is 10-20 ms.

DPM flow meters support various functions including: two programmable flow totalizers, low, high or range flow, temperature and pressure alarms, automatic zero adjustment (activated via local or communication interface), programmable SSR relay, programmable 0-5 Vdc, 0-10 Vdc or 4-20 mA analog outputs, user-programmable pulse output (via SSR), and extensive self-diagnostics functionality.

Significant savings become apparent when comparing the cost of a single DPM meter embodying these features, with that of acquiring and installing multiple, application-specific devices.


Principles of Operation

Operation of DPM flow meters is based on the measurement of the differential pressure across specially designed restrictor flow elements. The restrictor flow element is designed to establish laminar flow across the entire range of the instrument's operation from 0 to 133% of full scale range.


A high accuracy and high resolution **differential** pressure sensor is utilized to measure pressure drop across a laminar flow channel, which is linearly proportional to volumetric flow rate. To convert volumetric flow into mass flow, high accuracy and high resolution **absolute** pressure and temperature sensors are utilized. Based on data from the sensors and gas properties from the built-in data base of the instrument, the microcontroller calculates volumetric and mass flow, which along with pressure and temperature parameters are available on the instrument display or via digital interfaces. In addition, the mass flow reading is accessible via the instrument analog interface which can be set by user to 0-5, 0-10 Vdc or 4-20mA mode.





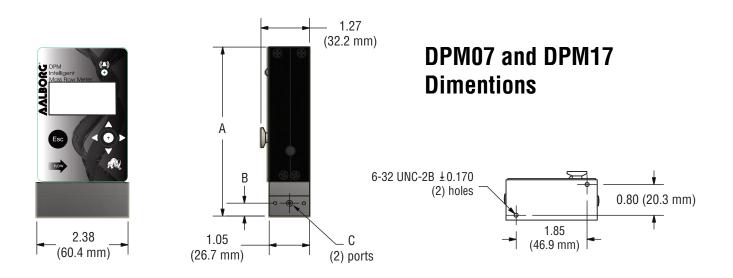

	A	В	C	
DPM07	4.40 (111.8 mm)	0.34 (8.5 mm)	10-32 UNF-2B	
DPM17	4.58 (116.2 mm)	0.35 (8.9 mm)	1/8-27 NPT	

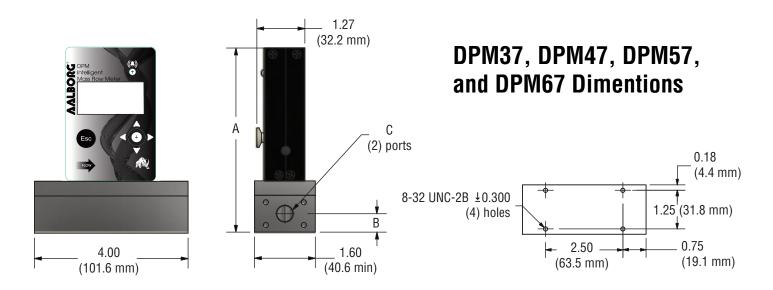

	A	В	C	
DPM37	4.85 (123.2 mm)	0.49 (12.3 mm)	1/4"-18 NPT	
DPM47	4.85 (132.2 mm)	0.49 (12.3 mm)	1/4"-18 NPT	
DPM57	DPM57 5.48 (139.1 mm)		1/2"-14 NPT	
DPM67 5.48 (139.1 m		0.80 (20.3 mm)	3/4"-14 NPT	

MULTI-PARAMETER - MULTI-GAS MASS FLOW METER



TABLE 17 - DPM FLOW RANGES					
MODEL NO.	FULL SCALE MASS FLOW RATE	PRESSURE DROP AT FULL SCALE FLOW (PSID)	PROCESS CONNECTION		
DPM07	0.5 to 50 sml/min	1.0	10-32 Female Thread		
DPM17	51 sml/min to 20 sl/min	1.0	1/8" NPT Female		
DPM37	21 sl/min to 50 sl/min	2.0	1/8" NPT Female		
DPM47	51 sl/min to 100 sl/min	2.5	1/4" NPT Female		
DPM57	101 sl/min to 250 sl/min	5.5	1/2" NPT Female		
DPM67	251 sl/min 500 sl/min	5.5	3/4" NPT Female		

TABLE 18 - DPM AC	CESSORY'S				
FITTINGS					
MODEL NO.	FITTING CODE	DESCRIPTION			
DPM07	F1C5	10-32 Thread, 1/8" Tubing, Compression, 316 ss.			
DPM07	F2C5	10-32 Thread, 1/8" Tubing, Compression, Nickel Plated Brass.			
DPM17	F2C2 1/8" NPT Thread, 1/8" tubing, Compression, 316 ss.				
DPM17	F2C4 1/8" NPT Thread, 1/4" tubing, Compression, 316 ss.				
DPM37	F4C4	1/4" NPT Thread, 1/4" tubing, Compression, 316 ss.			
DPM47	F4C6	F4C6 1/4" NPT Thread, 3/8" tubing, Compression, 316 ss.			
DPM57	F8C6	1/2" NPT Thread, 3/8" tubing, Compression, 316 ss.			
DPM67	1210-1-12-316	3/4" NPT Thread 3/4" tubing, 316 ss.			
		POWER SUPPLIES			
PS-GFM-110NA-2	Power Supply, 110 V / 12 Vdc /	North America.			
PS-GFM-110NA-4	Power Supply, 110 V / 24 Vdc / North America.				
PS-GFM-230EU-2	Power Supply, 220 V / 12 Vdc / Europe.				
PS-GFM-230EU-4	Power Supply, 220 V / 24Vdc / Europe.				
PS-GFM-240UK-2	Power Supply 240 V / 12 Vdc / United Kingdom.				
		CABLES			
CBL-A232	Communication Cable for DPM with RS-232 Interface 6 FT 3.5mm stereo audio con. with 3-wire to 9 pins female D-connector (included with each DPM).				
CBL-A485	Communication Cable for DPM with RS-485 Interface 3 FT 3.5mm stereo audio con. with 3-wire to stripped ends.				
CBL-8MINIDIN-3	Shielded cable 8 pins MinDin with stripped ends 3 feet long.				
CBL-8MINIDIN-12	Shielded cable 8 pins MinDin with stripped ends 12 feet long.				
	COMMU	NICATION PORT ACCESSORIES			
USB-RS232	USB to RS232 converter.				
USB-RS485	USB to RS485 converter.				
MODBUS INTERFACE ACCESSORIES					
ECS803-1	RJ45 shielded Y-adapter (Passiv	/e TAP).			
TDG1026-8C	RJ45 Modular Coupler.				
MOD27T	RJ45 Line Terminator (100 Ohm 0.25 W).				
JMOD4S-1	RJ45 Splitter fully shielded (5xRJ45, 1 input 4 outputs).				
TRD815BL-2	Category 5E Patch Twisted Pair Cable, RJ45 / RJ45, Blue 2.0 feet.				
TRD815BL-10	Category 5E Patch Twisted Pair Cable, RJ45 / RJ45, Blue 10.0 feet.				

TRD815BL-25

Category 5E Patch Twisted Pair Cable, RJ45 / RJ45, Blue 25.0 feet.



MULTI-PARAMETER - MULTI-GAS MASS FLOW METER

TABLE 19 - DPM SPECIFICATIONS			
FLOW MEDIUM	Please note that DPM Mass Flow Meters are designed to work only with clean, non-corrosive gases. Never try to measure flow rates of liquids with any DPM		
CALIBRATIONS	Perform at standard conditions [14.7 psia (101.4 kPa) and 70 $^{\circ}$ F (21.1 $^{\circ}$ C)] unless otherwise requested or stated.		
ENVIRONMENTAL (PER IEC 664):	Installation Level II; Pollution Degree II.		
FLOW ACCURACY (INCLUDING LINEARITY):	$\pm (0.5\% \text{ RD} + 0.2\% \text{ FS})$ at calibration temperature and pressure.		
REPEATABILITY:	±0.15% of full scale.		
FLOW TEMPERATURE COEFFICIENT:	0.05% of full scale/ °C or better.		
FLOW PRESSURE COEFFICIENT:	0.01% of full scale/psi (6.895 kPa) or better.		
FLOW RESPONSE TIME:	Default 10 ms (adjustable by user).		
INSTRUMENT WARM-UP TIME:	< 5 seconds.		
MAXIMUM MEASURABLE FLOW RANGE:	133% Full Scale.		
OPERATING RANGE / TURNDOWN RATIO:	0.5% to 100% Full Scale / 200:1.		
MASS REFERENCE CONDITIONS (STP):	70 °F & 14.696 PSIA (other available on request).		
MAXIMUM INTERNAL GAS PRESSURE (STATIC):	120 PSIG.		
MAXIMUM INSTANTANEOUS DIFFERENTIAL PRESSURE ACROSS INLET AND OUTLET:	12 PSID.		
PROOF PRESSURE:	145 PSIG.		
OPERATING TEMPERATURE:	-10 to +60 °C (14 to 140 °F).		
MOUNTING ATTITUDE SENSITIVITY:	None.		
RELATIVE GAS HUMIDITY RANGE:	0 to 100% (Non -Condensing).		
INGRESS PROTECTION:	IP40.		
OUTPUT SIGNALS:	Linear 0-5 Vdc (3000 ohms min. load impedance);		
	Linear 0-10 Vdc (5000 ohms min. load impedance); with power supply >= 12Vdc.		
	Linear 4-20 mA (550 ohms maximum loop resistance) with power supply >= 12Vdc.		
	Maximum noise 10mV peak to peak (for 0-5/0-10 Vdc output).		
TRANSDUCER INPUT POWER:	9 to 26 Vdc, 150 mV maximum peak to peak output noise. Power consumption: 100 mA maximum. Circuit board has built-in polarity reversal protection, 300mA resettable fuse provide power input protection.		
DIGITAL OUTPUT SIGNALS:	Standard RS-232 or RS-485 (user selectable). Optional Modbus over isolated RS-485 transceiver.		
**MATERIALS FLUID CONTACT:	316 stainless steel, 416 stainless steel, high temperature polyamide, alumina ceramic, epoxy, silicone, glass, gold. Viton® O-rings; Buna-N®, EPR® and Kalrez® O-rings are optional.		

^{**} The selection of materials of construction, is the responsibility of the customer. The company accepts no liability.

ORDERING INFORMATION MULTI-PARAMETER - MULTI-GAS MASS FLOW METER



DPM	MODEL							
	MAX FLO	OW (N2)						
	07		to 50 sml/min					
	17		to 20 sl/min					
	37	21 sl/min to						
	47	51 sl/min to						
	57		to 250 sl/min					
	67	251 sl/min t	to 500 sl/min					
		MATERIAL						
			Stainless Steel					
			SEALS					
			V	Viton®				
			V	VILOII				
				CONNEC				
				0	Not Included	d (Optiona	l Accessory)	
					OLED DE	DOUT		
					OLED REA			
						NO Displa OLED Rea		
					L.	ULED NEA	uoui	
						POWER		
						6	Universal 9	to 26 Vdc
							011	FRUT OLONAL
								TPUT SIGNAL
								A 0-5 Vdc
								B 4-20 mA
							[0-10 Vdc
								DIGITAL INTERFACE
								2 RS232
								5 RS485
								3 RS232 with Modbus
								4 RS485 with Modbus
								1 100 Will Moubus
DPM	17	S	V	0	L	6		A 3

EXAMPLE: DPM17S-V0L6-A3

SPECIFY: FLOW RANGE, GAS and PRESSURE *n.a. = not applicable.

DPM17, 316 stainless steel, Viton® seals, with OLED readout 9-26 Vdc, 0-5 Vdc output signal,RS 232 with Modbus